

## FCC Note

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**⚠ WARNING:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the legal limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

Contact us at: [munchkin.com](http://munchkin.com)  
800.344.2229 

© 2019 MUNCHKIN, INC. 7835 GLORIA AVE.,  
VAN NUYS, CA 91406. MADE IN INDONESIA.



User Manual  
MODEL# MKTR 0465  
Rev 4

## Musical Night Light Mirror



Keep these instructions for future reference as they contain important information.

Adult assembly required.

Accessories not included.

CCD-0176-000 REV 4

## Battery Information and Activation

### Battery Information / Mirror:

Locate the battery compartment door on the back of the mirror. Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Insert three "AA" (LR6) alkaline batteries. Replace battery compartment door. Do not overtighten screw.

### Battery Information / Remote:


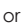 

Locate the battery compartment door on the back of the remote. Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Insert three "AAA" (LR03) alkaline batteries. Replace battery compartment door. Do not overtighten screw.


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin the remote or the mirror. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable batteries.
- Insert batteries as indicated in battery compartments.
- Remove batteries during long periods on non-use. Always remove exhausted batteries from the remote and mirror. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the remote and mirror before charging.
- If rechargeable batteries are used, they are only to be charged under adult supervision.
- Use caution when opening battery compartment as some batteries may leak, explode or catch on fire.
- Do not submerge in water or other liquids.


## Mirror Activation

### Normal Operation:

- Locate power switch  on the back of the mirror (located on the battery box).
- Slide switch to desired volume level – low  or high 
- Mirror is now ready to function using the remote control.



NOTE: To help prolong battery life, slide the power switch to the  position when not in use.


### Night Light Activation:

- Press light button  on remote control to activate night light.

NOTE: Light will fade off after 10 seconds.

### Music Activation:

- Press music button  on remote control to activate music.
- To stop music, press music button  on remote again.

NOTE: Music stops automatically after approximately 15 minutes to conserve battery life. Press music button  on remote to restart music.

**Important:** When using remote, ensure the path between the remote and mirror is clear to prevent an obstructed signal.

**To Clean:** Clean and inspect before use. Wipe the mirror with a soft, dry cloth. Do not use any cleaning solution. Fabric is surface washable with a damp cloth and mild soapy water. Air dry. Do not bleach. Do not submerge mirror in water.